

## **To Program the S-2000 Jr Scale to work with the DLP-50 Printer**

1. Beginning from the off position on the scale, hold down the ZERO key while pressing the on/off button to turn on the scale, then, release both buttons. “U-Set” should be showing in the top right LED display.
2. Press the ZERO key to choose the function that needs to be programmed. In this case, press the ZERO key until the word “Print” shows in the bottom left LED display.
3. Then, press the TARE button to choose the printer type. In this case, press the TARE button until DLP-50 is showing in the bottom right LED display.
4. To save printer setting, Press ZERO button once again to move onto the next function, or until all three LED fields read all zero’s “0.000”. Or hit ZERO once to save, then turn the scale off, then on again.
5. Make sure the correct AC Adaptor is plugged into the right unit because both adaptors will fit.